 


TELESCOPIC COOKER HOOD

MODEL NO.

31100125 31100126

INSTRUCTION MANUAL

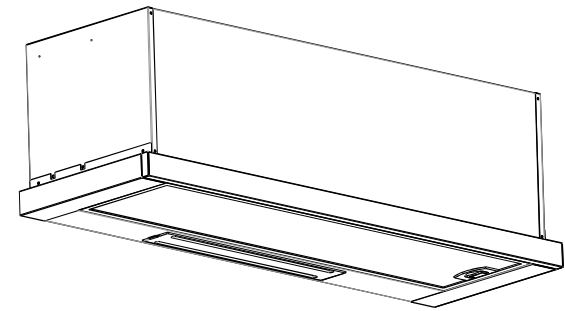

◆ PLEASE READ THE MANUAL CAREFULLY BEFORE OPERATION. ◆

BEFORE USING YOUR APPLIANCE

Before you use the rangehood, we recommend that you read through the whole user manual which provides the description of the rangehood and its functions. To avoid the risks that are always present when you use an electrical appliance, it is important that the rangehood is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.

For future reference, please store this booklet in a safe place.

CONDITIONS OF USE

This appliance is intended to be used in household and similar applications such as

- Staff kitchen areas in shops, offices and other working environments
- Farm houses
- By clients in hotels, motels and other residential type environments
- Bed and breakfast type environments

CONTENTS

- 3 **Safety information**
- 4 **Product description**
- 5 **Dimensions**
- 6 **Rangehood installation**
- 8 **Operation**
- 8 **Maintenance and cleaning**
- 9 **Troubleshooting**
- 10 **Consumer Care Center**

LEGEND



WARNING!

This symbol indicates information concerning your personal safety



CAUTIONS!

This symbol indicates information on how to avoid damaging the rangehood.



IMPORTANT!

This symbol indicates tips and information about use of the rangehood.

SAFETY INFORMATION

This manual explains the proper use of your new canopy rangehood. Please read this manual carefully before using the product. This manual should be kept in a safe place for handy reference.

This rangehood is a domestic appliance which has been manufactured and tested to comply with International Standard IEC 60335.2.31.

Read the following carefully to avoid damage or injury.



This symbol indicates never to do this



This symbol indicates always do this



WARNING!

Follow these instructions carefully to avoid an electric shock or fire.

	Young children should be supervised to ensure they do not play with the rangehood.
	This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
	Ensure the rangehood is switched off before carrying out maintenance, to avoid any possibility of electric shock.
	Never carry out flambe cooking under the rangehood.
	This rangehood is not recommended for barbecues.
	This rangehood cannot be installed for external use.
	Grease filters must be removed every four weeks (maximum) for cleaning to reduce the risk of fire.
	The exhaust from the rangehood must not be discharged into any heating flue, which may carry combustion products from other sources.(Fig.1)
	The exhaust air must not be discharged into a wall cavity, unless the cavity is designed for the purpose.
	There must be adequate ventilation of the room when the rangehood is used at the same time as appliances burning gas or other fuels.
	Always cover lit gas burners with pots or pans when rangehood is in use.
	Always switch off gas burners before you remove pots or pans.
	Do not leave lit gas burners exposed due to the risk of fire.(Fig.2)

Electrical connection

Check that the mains voltage matches with the voltage on the data plate inside the rangehood. Check that the installation complies with standards of local building, gas and electrical authorities. Before connecting to the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the rangehood.If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.

Safety warnings For the installer

When installing the rangehood, make sure you adhere to the minimum and maximum distances from the rangehood base to the hob surface (as per table on page 6).

Exhaust flue installation: The following rules must be strictly followed to obtain optimal air extraction.

- Keep exhaust flue short and straight
- Do not reduce the size or restrict exhaust flue.
- Keep bends in the exhaust flue to a minimum.
- When using flexible flue always install duct with helix pulled taut to minimise pressure loss.
- Failure to observe these basic instructions will drastically reduce the performance and increase the noise levels of the range hood.

Exhaust air must not be discharged into a wall cavity, unless the cavity is designed for the purpose. The exhaust from the cooker hood must not be discharged into any heating flue, which may carry combustion products from other sources.

NOTE: Some installations may require the telescopic exhaust cover to be cut to length. Cut with sharp tin snips or a fine-tooth hack saw blade, taking care not to distort or dent the exhaust cover.

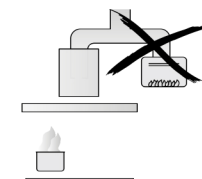 


Fig. 1

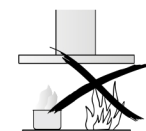 


Fig. 2



Ref	Q'ty	Product Components
1	1pc	Hood body, complete with: controls, lights, blower
2	2pcs	Damper (flaps)
3	2pcs	Aluminium mesh filter
4	1pc	Instruction manual
5.a	4pcs	Mounting Screws
5.b	4pcs	Mounting gasket



RANGE HOOD INSTALLATION

⚠ WARNING!

Refer to "Safety information" chapter

1. The hood is to be mounted on the mounting board of the cabinet. When installed, the hood must be not less than 65cm above electric burners or 75cm above gas or mixed-fuel burners. (Fig.5)

* If the instructions of the hob specify a greater distance than the minimum above, then that shall be the minimum height for installation.

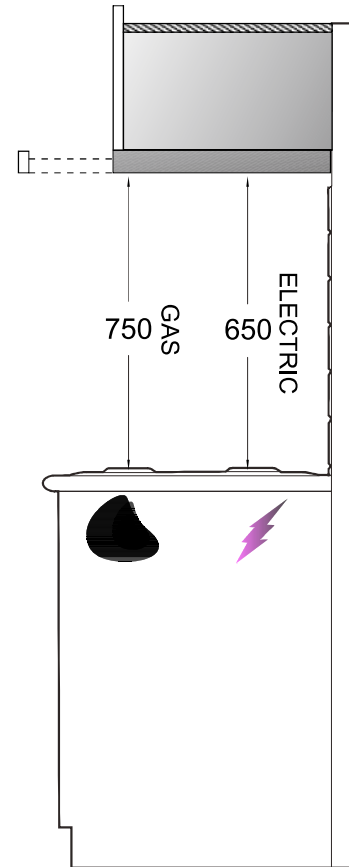 


Fig.5

RANGE HOOD INSTALLATION

Before installation, please make cabinet according to below diagram

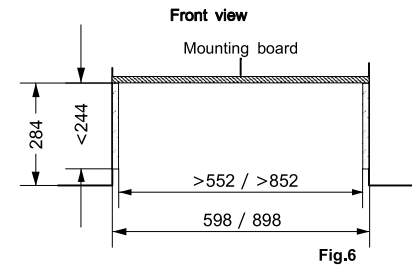 


Fig.6

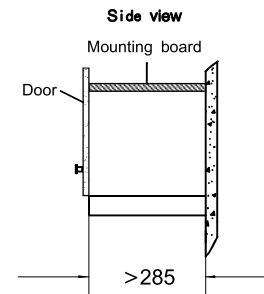 


Fig.7

After installation

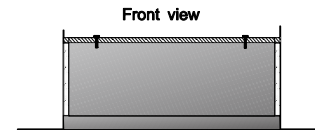 


Fig.8

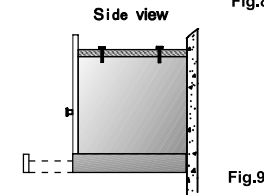 


Fig.9

2. Drill a hole of 165mm diameter, 4X $\phi 8$ mounting holes and one clearance hole of 70mm diameter for power cord on the cabinet board, respecting the distance indicate in Fig.10.

 
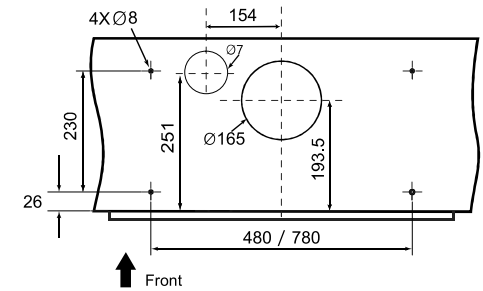 


Fig.10

3. Insert 4 mounting screws with 4 mounting gaskets to fix the hood. (Fig.11)

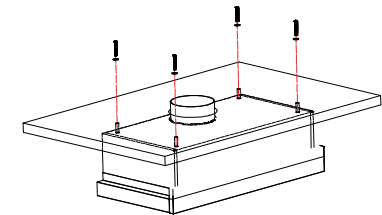

4. Fit the flexible flue(not supplied) to the duct transition Use fixing tape to secure flexible pipe to the duct transition.(Fig.12)

NOTE: For ducted mode, we recommend extending flue pipe through the roof to external" roof cap"to vent exhaust externally. We do not recommend venting into ceiling cavity.

NOTE: To ensure optimum performance of the range hood, the use of rigid ducting is recommended .the use of bends should be avoided. All ducting must be fire retardant.

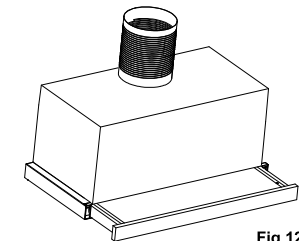 


Fig.12

RANGE HOOD INSTALLATION

5. Electrical connection:

Electrical wiring must be done by a qualified person(s) in accordance with all applicable codes and standards. Turn off electrical power at service entrance before wiring .

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Do not use the plug and an extension cord other than the ones initially supplied with the hood.

OPERATION

 


Fig.13

MAINTENANCE AND CARE

The hood must always be disconnected from the electricity supply before beginning any maintenance work.

Cleaning the hood

- Clean the outside of the hood using a damp cloth and a solution of water and mild washing up liquid.
- Never use corrosive, abrasive or flammable cleaning products or products containing bleach .
- Never insert pointed objects in the motor's protective grid.
- Only ever clean filter using a damp cloth and mild washing up liquid.
- It is extremely important to clean the unit and change the charcoal filters at the recommended intervals. Failure to do so will cause grease deposits to build up that could constitute a fire hazard.

Metal grease filter

- The purpose of the grease filters is to absorb grease particles which from during cooking and it must always be used, either in the external extraction or internal re-circulation function .

Attention:

The metal grease filters must be removed and washed every three weeks.

Removing the metal grease filters

1. Pull down the latch of filter.(Fig.14)
2. Take down the filter from body.

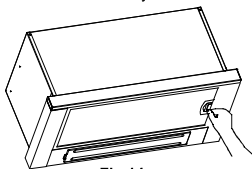 


Fig.14

To replace lamp(Fig.15)

- 1.Take off the lamp cover.
- 2.Loosen the lamp anticlockwise.
- 3.Replace with 2W E14 LED lamp.

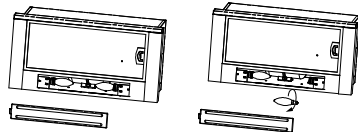 


Fig.15

TROUBLE SHOOTING

Problem	Remedy
The cooker hood will not start	Check that the hood is connected to an electrical supply Check that a fan speed has been selected
The Rangehood is not working	Check that the fan speed is set high enough for the task The grease filters are clean The kitchen is adequately vented to allow the entry of fresh air If set up for recirculation, check that the charcoal filter is still effective If set up for extraction, check that the duct and outlets are not blocked Do not operate cooktop without pots/pans Do not flambe under cooktop
The rangehood has switched off during operation	The safety cut-out device has been tripped-turn off the hob and wait for the device to reset. If the hood has been installed below the heights indicated in the installation instructions the motor will cut out frequently which will damage the hood

Note: This product is fitted with a safety cutout device.

- If the rangehood is installed too close to the cooker top, flambe cooking, operating the cooktop without cooking utensils and blocked filters may activate the safety cutout device. If the hood stops during operation, correct the faults and allow time for the safety cutout device to reset. Then the rangehood will function correctly.

- Do not operate cooktop without pots/pans
- Do not flambe under cooktop