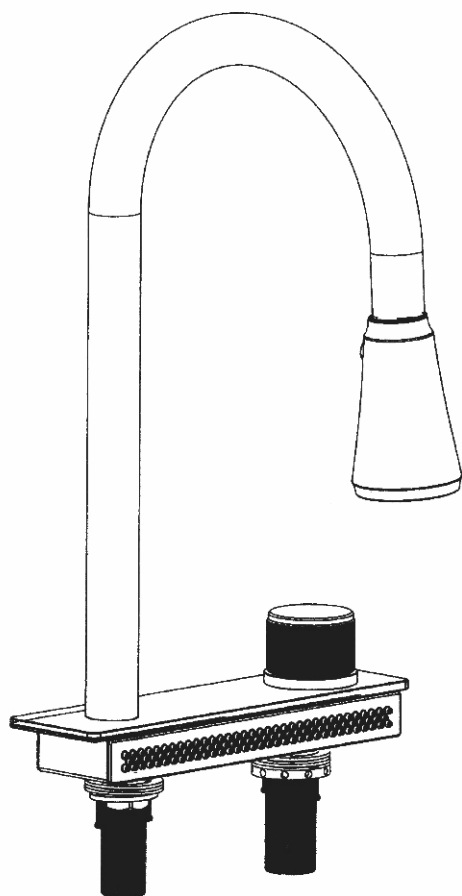


Pull out Kitchen faucet

Installation manual



** Please specify the color number when ordering

Pull out Kitchen faucet

Before Installation

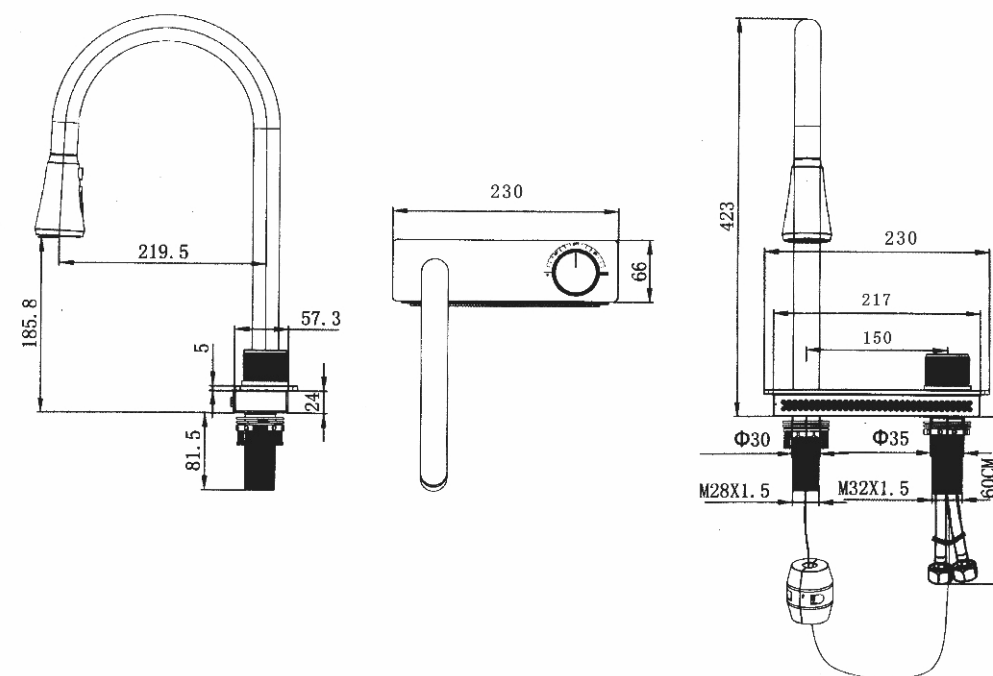
Announcements:

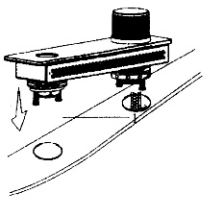
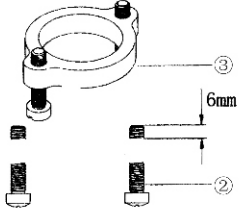
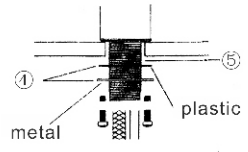
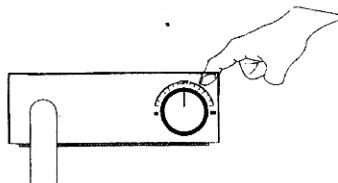
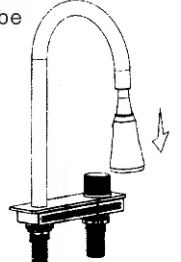
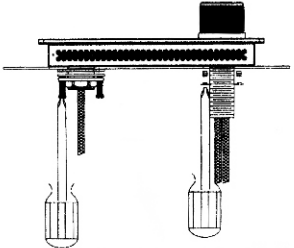
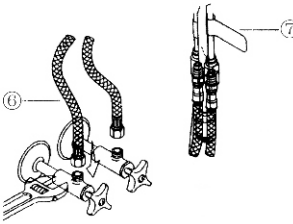
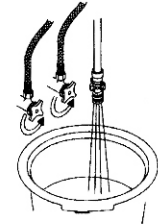
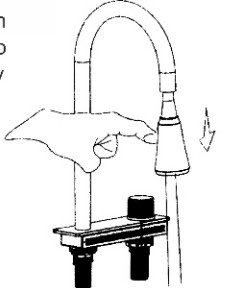
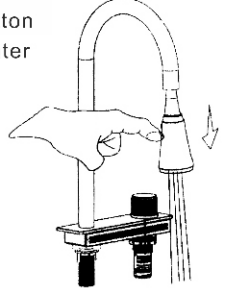
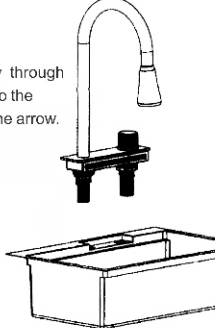
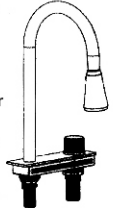
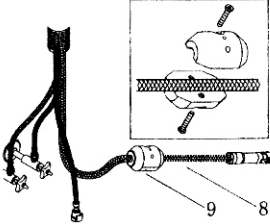
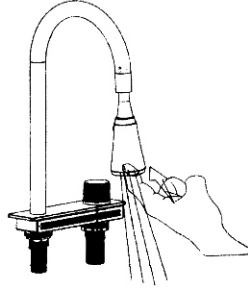
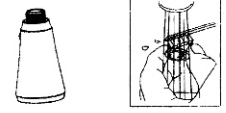
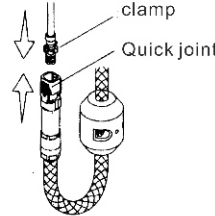
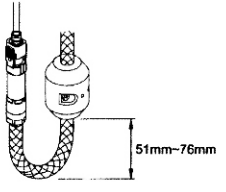
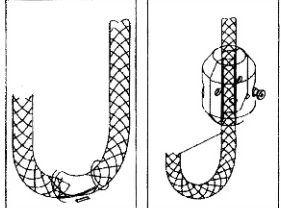
1. Be sure to flush the water supply pipe thoroughly first to remove debris from pipe.
2. If install new sink, you can install the faucet to the sink first.
3. The highest pressure for the shower: 0.5Mpa (5bar). The highest temperature for the shower: 60°C. Please pay special attention that the shower and its connecting pipe should keep away from heater. Otherwise, the shower and its sealing may be damaged, and even harm the user.

Instruction

Handle switch: turn right is hot water-mixed water-cold water, back to the middle is off. Turn left is cold water-mixed water-hot water back to the middle is off.

Installation dimension



STEPS			Use guideline	
 1.Put the O-ring(1) on the Countertop and install the faucet,handle is on the right side.	 2.Rotate the screws(2)into the holes(3) till the screw come out the ring with 6mm.	 3.Install the gaskets(4) and metal ring into the nut(5).	Handle switch :turn right is hot water-mixed water-cold water, back to the middle is off. turn left is cold water-mixed water-hot water back to the middle is off . 	 The shower can be pulled out freely.
 4.Adjust and tighten the screws onto the metal ring.	 5.Connect and tighten the hoses(6)to the valve sticks, with cold tag(7)should be connected to cold water.	 6.Open cold and hot water valves,let it flow about one minute	Press the button on the shower to switch the spray mode. 	Press the button to release water 
 7.Put the body through the holes into the sink follow the arrow.	 8.Connect the pull out hose with shower then to through the tube.Check the hose if is smooth.	 9.Put the gravity ball(9)onto the shower hose(8) loosely.	Maintenance: 1.Turn on the faucet;rub the nozzels to remove water impurity. 	 2.When water impurities reduce the water flow,take down and clean up the aerator from the shower,Then put it back.
 10.Connect the shower hose with the faucet connecting pipe.	 11.As picture,adjust the place of gravity ball and tighten the screws.	 12.If needed,adjust the gravity ball to the proper place.	Inspection Check and make sure all connections are tightened,and handle on the off place,Open main water source and drainage system,check and repair the leakage connection. Cleaning Instuction Applicable surface:clean the coating surface with neutral soapy water.Dry the entire surface thoroughly with a clean soft cloth.Avoid detergents,such as ammonia water,cleanser, toilet cleaner,can cause damage to the plating surface. Abrasive cleaning tools can not be used on the faucet and its accessories too.	