

## GT Series Soft-close Overlapping Sliding Door System

Sliding Door Installation Dimensions(mm)

## Regular-type Installation Dimensions

H=height from wardrobe top panel  
to bottom panel

h=door height


LT=wardrobe internal depth

T=door thickness

Wardrobe internal depth: LT=60(min)

Door height:h=87

Door thickness:T=23/30/35/50

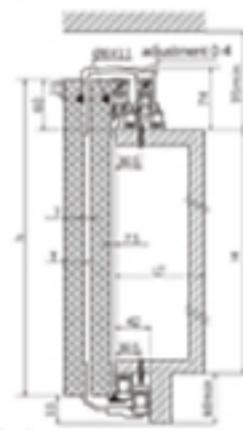

The distance from top panel to ceiling is 95 at least

## Adjustable-type Installation Dimensions

H=height from wardrobe top panel  
to bottom panel

h=door height

LT=wardrobe internal depth

T=door thickness

Wardrobe internal depth: LT=135(max)

Door height:h=87


Door thickness:T=18-50



The distance from top panel to ceiling is 105 at least


## A=damper installation dimensions

B=lower stopper installation dimensions A=8 B=36

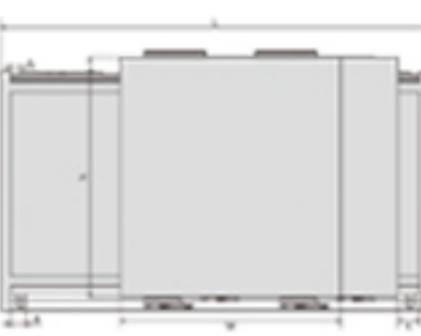


Door self closing distance K=50

Top and Bottom Track Installation Dimensions(mm)

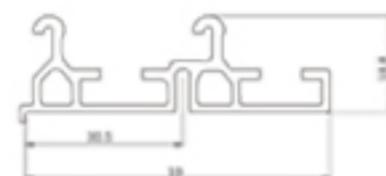

Top Track

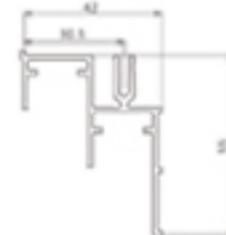


Bottom Track

## Two Door Installation Dimensions

Door Width W=L/2+X/2




L=wardrobe width

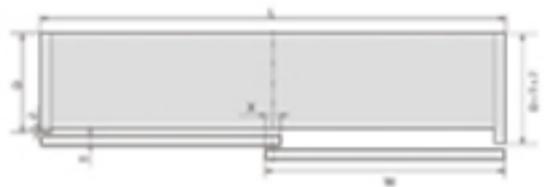

## Three Door Installation Dimensions(two inner doors and one outer door)

S=door overlay

L=wardrobe width

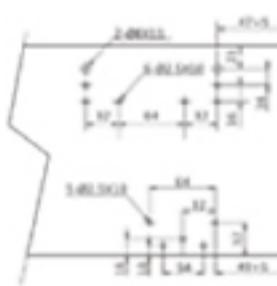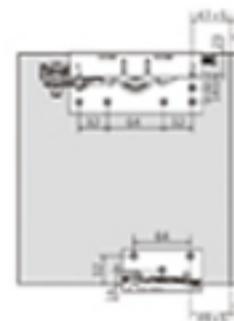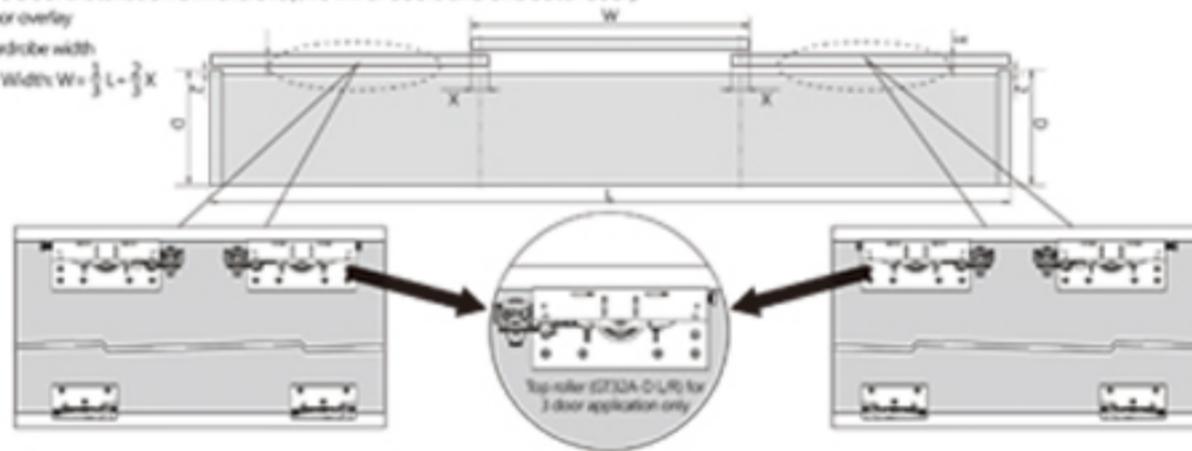Door Width:  $W = \frac{2}{3}L + \frac{2}{3}X$ 

## Three Doors Damper Installation Dimensions



## Three Doors Installation Dimensions

**DTC**  
DONGTAIGuangdong Dongtai Hardware Precision Manufacturing Co.,Ltd  
Tel: +86-0757-26801686 Fax: +86-0757-26801676  
E-mail: dts@dtchc.com Web site: www.dtchc.com

302790001-03210

## GT32A/GT32B/GT32C/GT32D

### Assembly



Insert the damper into top track  
Insert the lower stopper into bottom track




Fix the damper with 3mm alien key



Fix the lower stopper with 8mm spanner

### Assembly

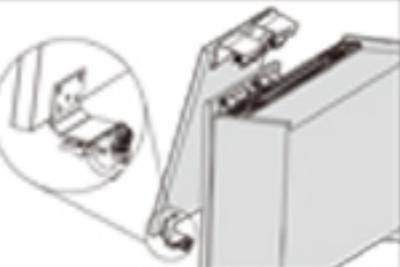


Open the anti-drop device on bottom roller before mounting the outer door




Mount the outer door



Install the track

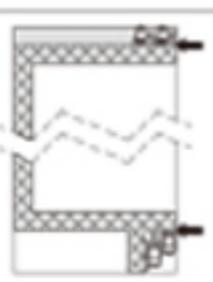

Fix the screw

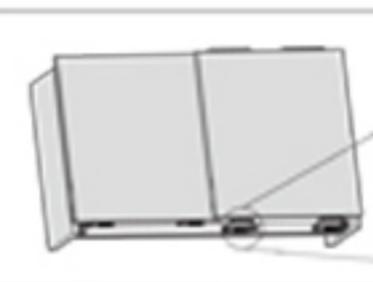

Close the anti-drop device on bottom roller after mounting the outer door on wardrobe




Opening position of anti-drop device on bottom roller




Closing position of anti-drop device on bottom roller




Install inner door top and out door's top and bottom roller

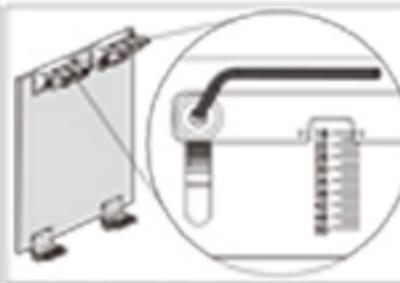

Adjustable-type need to adjust the door thickness adjustment device first.

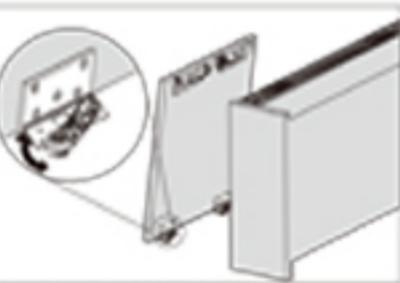


Open the anti-drop device on bottom roller before mounting the inner door

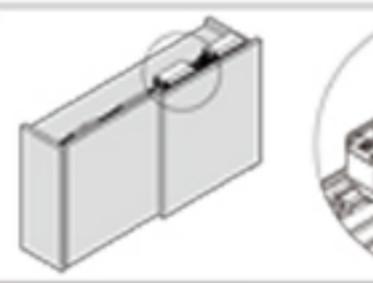


Lock the inner and outer door's anti-drop device on top roller



Mount the inner door

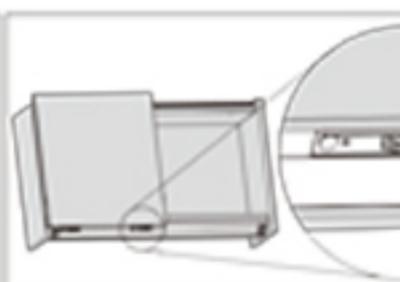


Close the anti-drop device on bottom roller after mounting the outer door on wardrobe

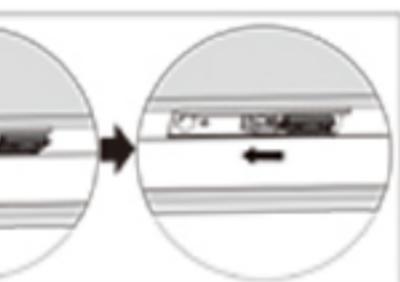

Opening position of anti-drop device on bottom roller

Closing position of anti-drop device on bottom roller

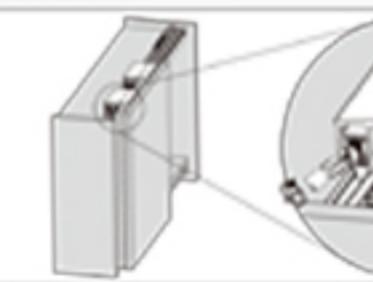

Adjust the inner and outer door height

