GT Series Soft-close Overlapping Sliding Door System

Sliding Door Installation Dimensions(mm)

Regular-type Installation Dimensions

H=height from wardrobe top panel
to bottom panel
h=door height
LT=wardrobe internal depth
T=door thickness
Wardrobe internal depth: LT=60(min)
Door height:h=H+87
Door thickness:T=23/30/35/50

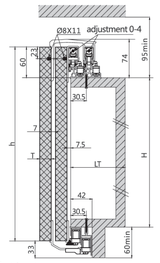

The distance from top panel to ceiling is 95 at least

Adjustable-type Installation Dimensions

H=height from wardrobe top panel
to bottom panel
h=door height
LT=wardrobe internal depth
T=door thickness
Wardrobe internal depth: LT=135(min)
Door height:h=H+87
Door thickness:T=18~50

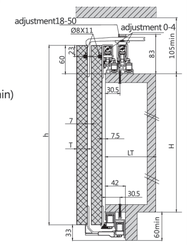

The distance from top panel to ceiling is 105 at least

A=damper installation dimensions A=8
B=lower stopper installation dimensions B=36

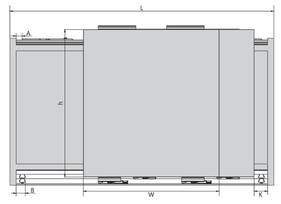

Door self closing distance K=50

Top and Bottom Track Installation Dimensions(mm)



Top Track

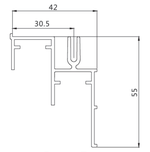

Bottom Track

Two Door Installation Dimensions

Door Width: W=L/2+(X/2)
L=wardrobe width



Three Door Installation Dimensions(two inner doors and one outer door)

S=door overlay
L=wardrobe width
Door Width: $W=\frac{1}{3}L+\frac{2}{3}X$

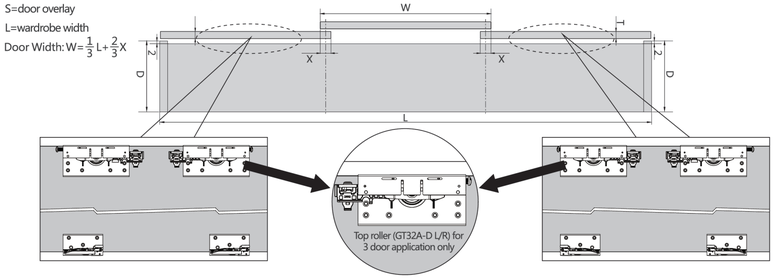

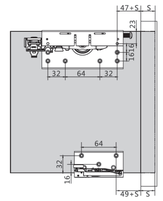

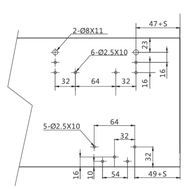

Three Doors Damper Installation Dimensions

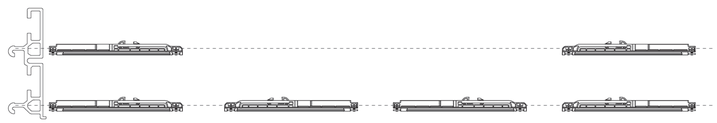

Three Doors Installation Dimensions

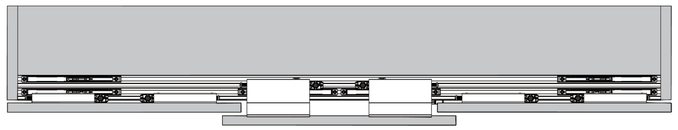

DTC
Global Quality Benchmark

Guangdong Dongtai Hardware Precision Manufacturing Co.,Ltd
Tel:+86(0)757-25332283 Fax:+86(0)757-25551876
E-mail:dtc@dtcdtc.com Website:www.dtcdtc.com

302700001-03210

DTC 东泰

GT32A/GT32B/GT32C/GT32D

Assembly

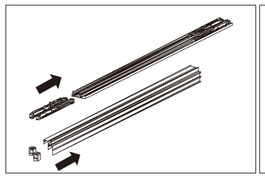

Insert the damper into top track
Insert the lower stopper into bottom track

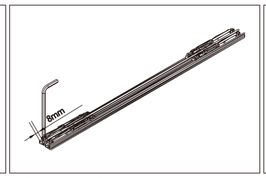

Fix the damper with 3mm allen key

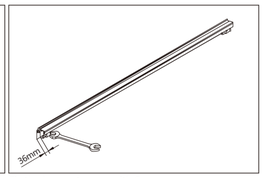

Fix the lower stopper with 8mm spanner

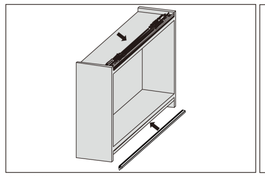

Install the track

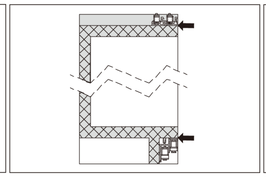

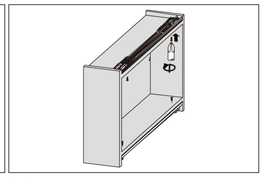

Fix the screw

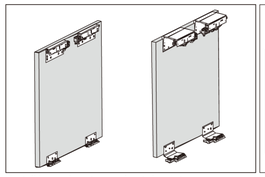

Install inner door top and out door's top and bottom roller

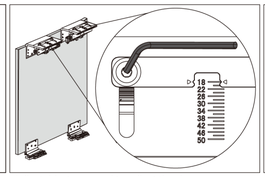

Adjustable-type need to adjust the door thickness adjustment device first.

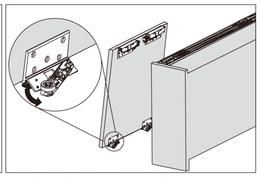

Open the anti-drop device on bottom roller before mounting the inner door

Assembly

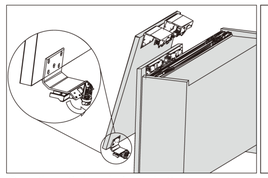

Open the anti-drop device on bottom roller before mounting the outer door

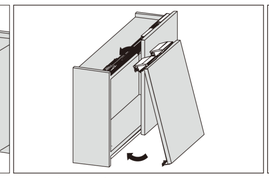

Mount the outer door

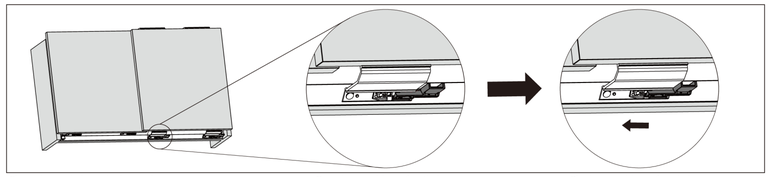

Close the anti-drop device on bottom roller after mounting the outer door on wardrobe

Opening position of anti-drop device on bottom roller

Closing position of anti-drop device on bottom roller

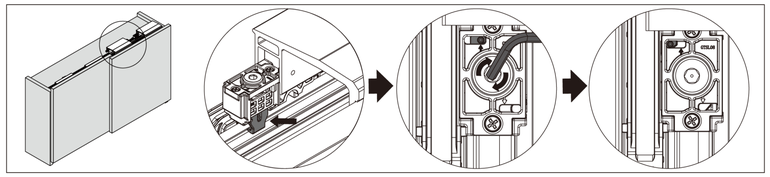

Lock the inner and outer door's anti-drop device on top roller

Adjustment

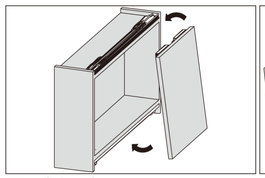

Mount the inner door

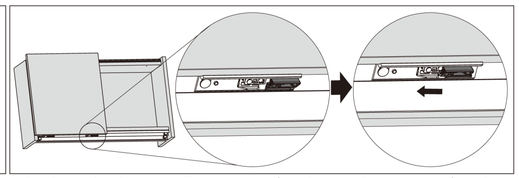

Close the anti-drop device on bottom roller after mounting the outer door on wardrobe

Opening position of anti-drop device on bottom roller

Closing position of anti-drop device on bottom roller

Adjustment

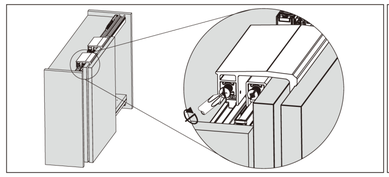

Adjust the inner and outer door height

DTC

GT32A/GT32B/GT32C/GT32D