

Super soft closing drawer system


Installation Manual

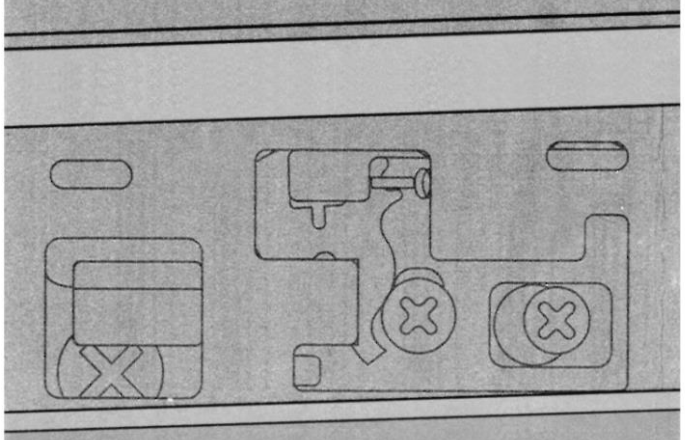


TRS


Slim Line

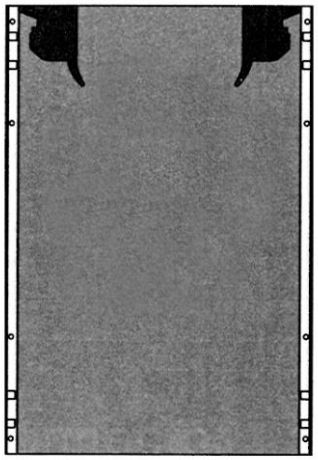


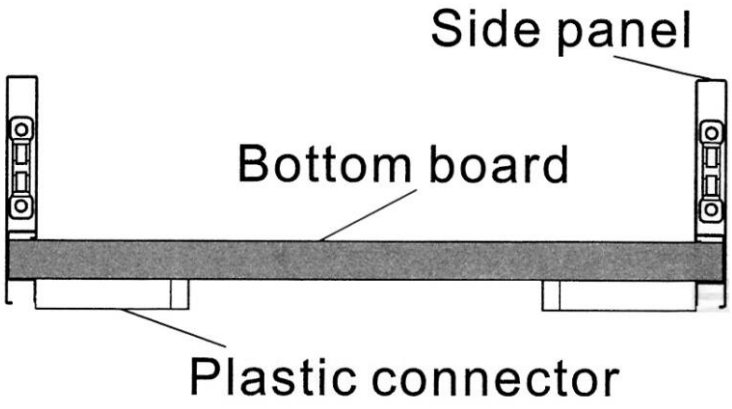


Drawer mounting

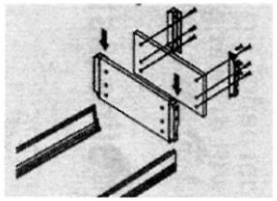

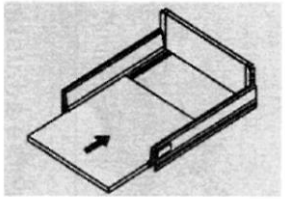

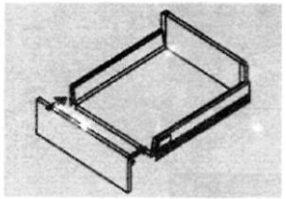

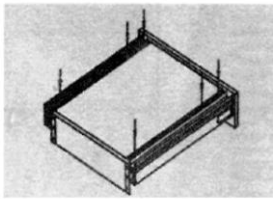


Installation Illustration ▶▶


*** Front panel assembly**
Take out front fixing braket and fix to inner front panel side with two M3.5*12 self tapping screws

*** Front panel disassembly**
Turn Philip's screw clockwise to release front fixing braket, unscrew the braket from the panel

Installation Steps ▶▶

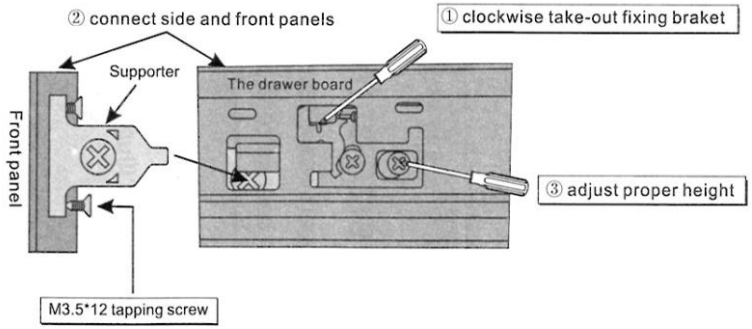

Soft closing drawer installation instruction

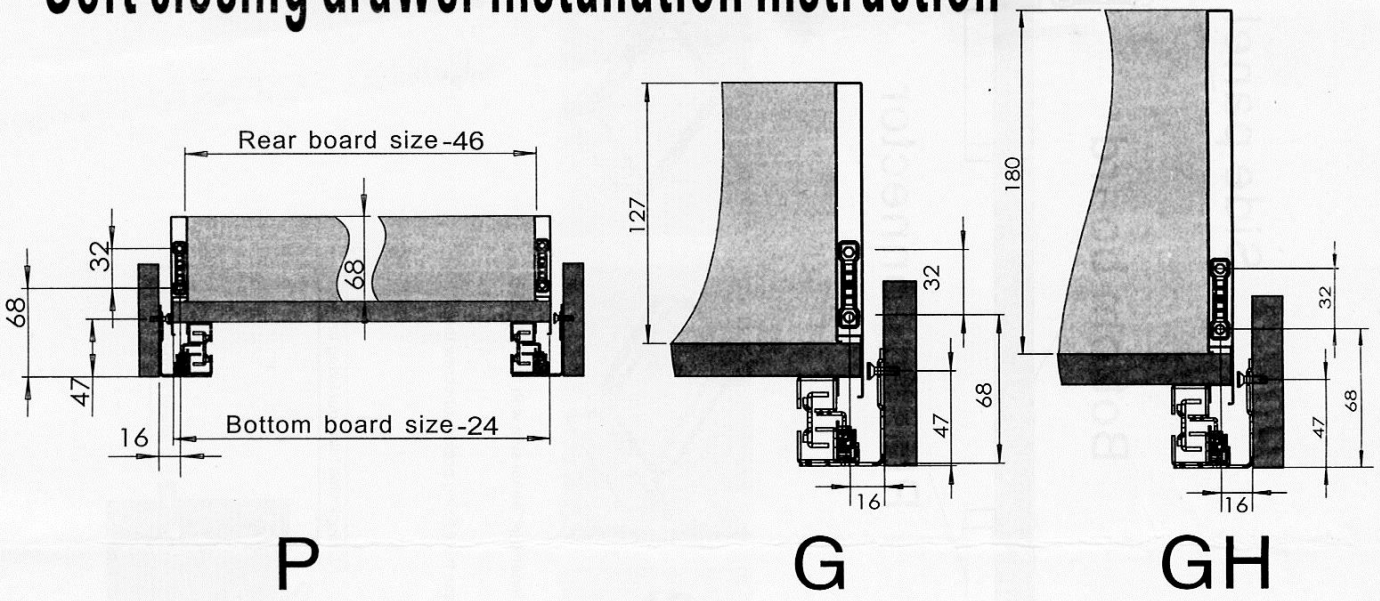

The size of materials

Rear board size=Rear board width(Cabinet width-46mm)*Rear board (P=68mm/G=127mm/H=180mm)*16mm

Bottom board size=Bottom board width(Cabinet width-24mm)* Bottom board length(Size) -8mm*16mm

---

Installation Illustration

▶▶


*** Simple and precise adjustment on front panel**
Tune plastic philip's screw in front fixing braket for ±3mm left/right movement on front panel

*** Efficient and swift drawer put-in & take-out**
When drawer put-in, box on glides and move backward for self block;

Demonstration of the type(mm)

Type	Size	Min Cabinet Length	Min installation height
P300	300mm	320mm	140mm
P350	350mm	370mm	140mm
P400	400mm	420mm	140mm
P450	450mm	470mm	140mm
P500	500mm	520mm	140mm
P550	550mm	570mm	140mm
G300	300mm	320mm	200mm
G350	350mm	370mm	200mm
G400	400mm	420mm	200mm
G450	450mm	470mm	200mm
G500	500mm	520mm	200mm
G550	550mm	570mm	200mm
GH300	300mm	320mm	252mm
GH350	350mm	370mm	252mm
GH400	400mm	420mm	252mm
GH450	450mm	470mm	252mm
GH500	500mm	520mm	252mm
GH550	550mm	570mm	252mm

Slide installation size of hole(mm)

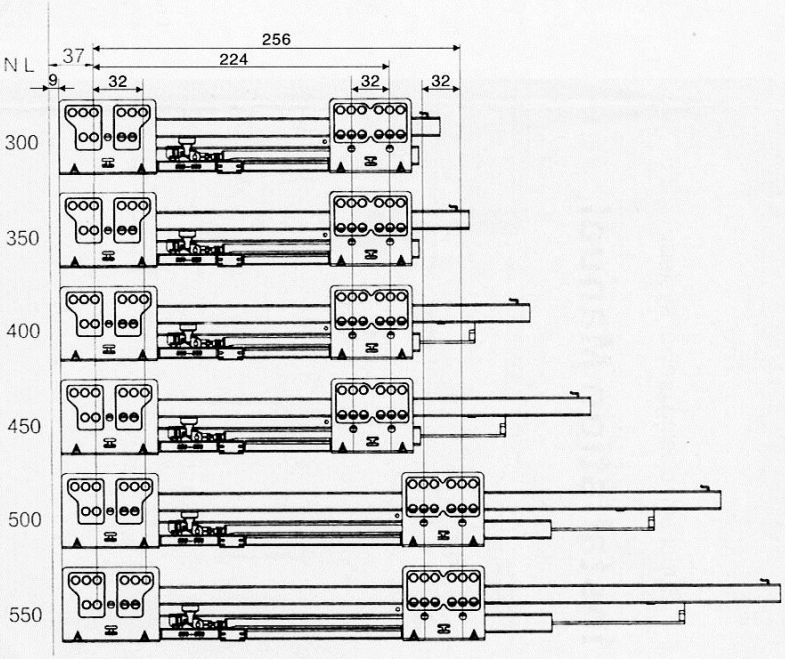

Drawer Box Components

Drawer side panel - 1 pair
Plastic connector - 1 pair
Plastic trademark covers - 2 pcs
Steel glides - 1 pair

Attachments

Installation Manual
Quality Certification