
ACCESSORIES


01 / Components and basic assembly

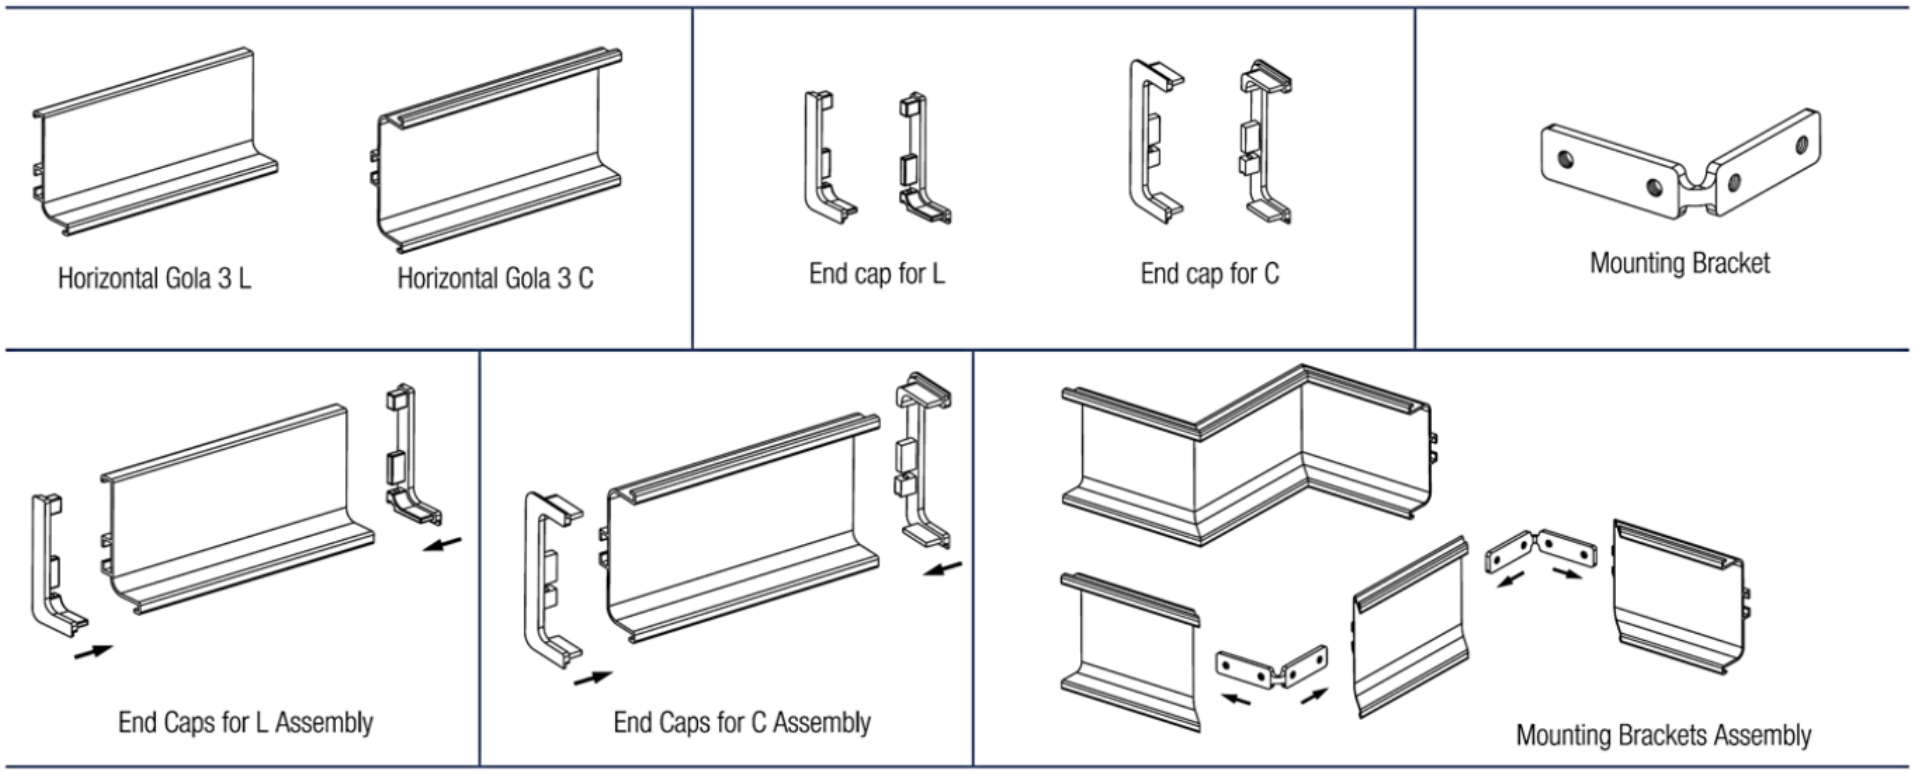

1. Select the L or C profile and its matching left/right end caps.
2. Insert the end caps; use the corner mounting bracket where required.
3. Check alignment and fit before final fastening.

ACCESSORIES


02 / Optional LED installation for L profile

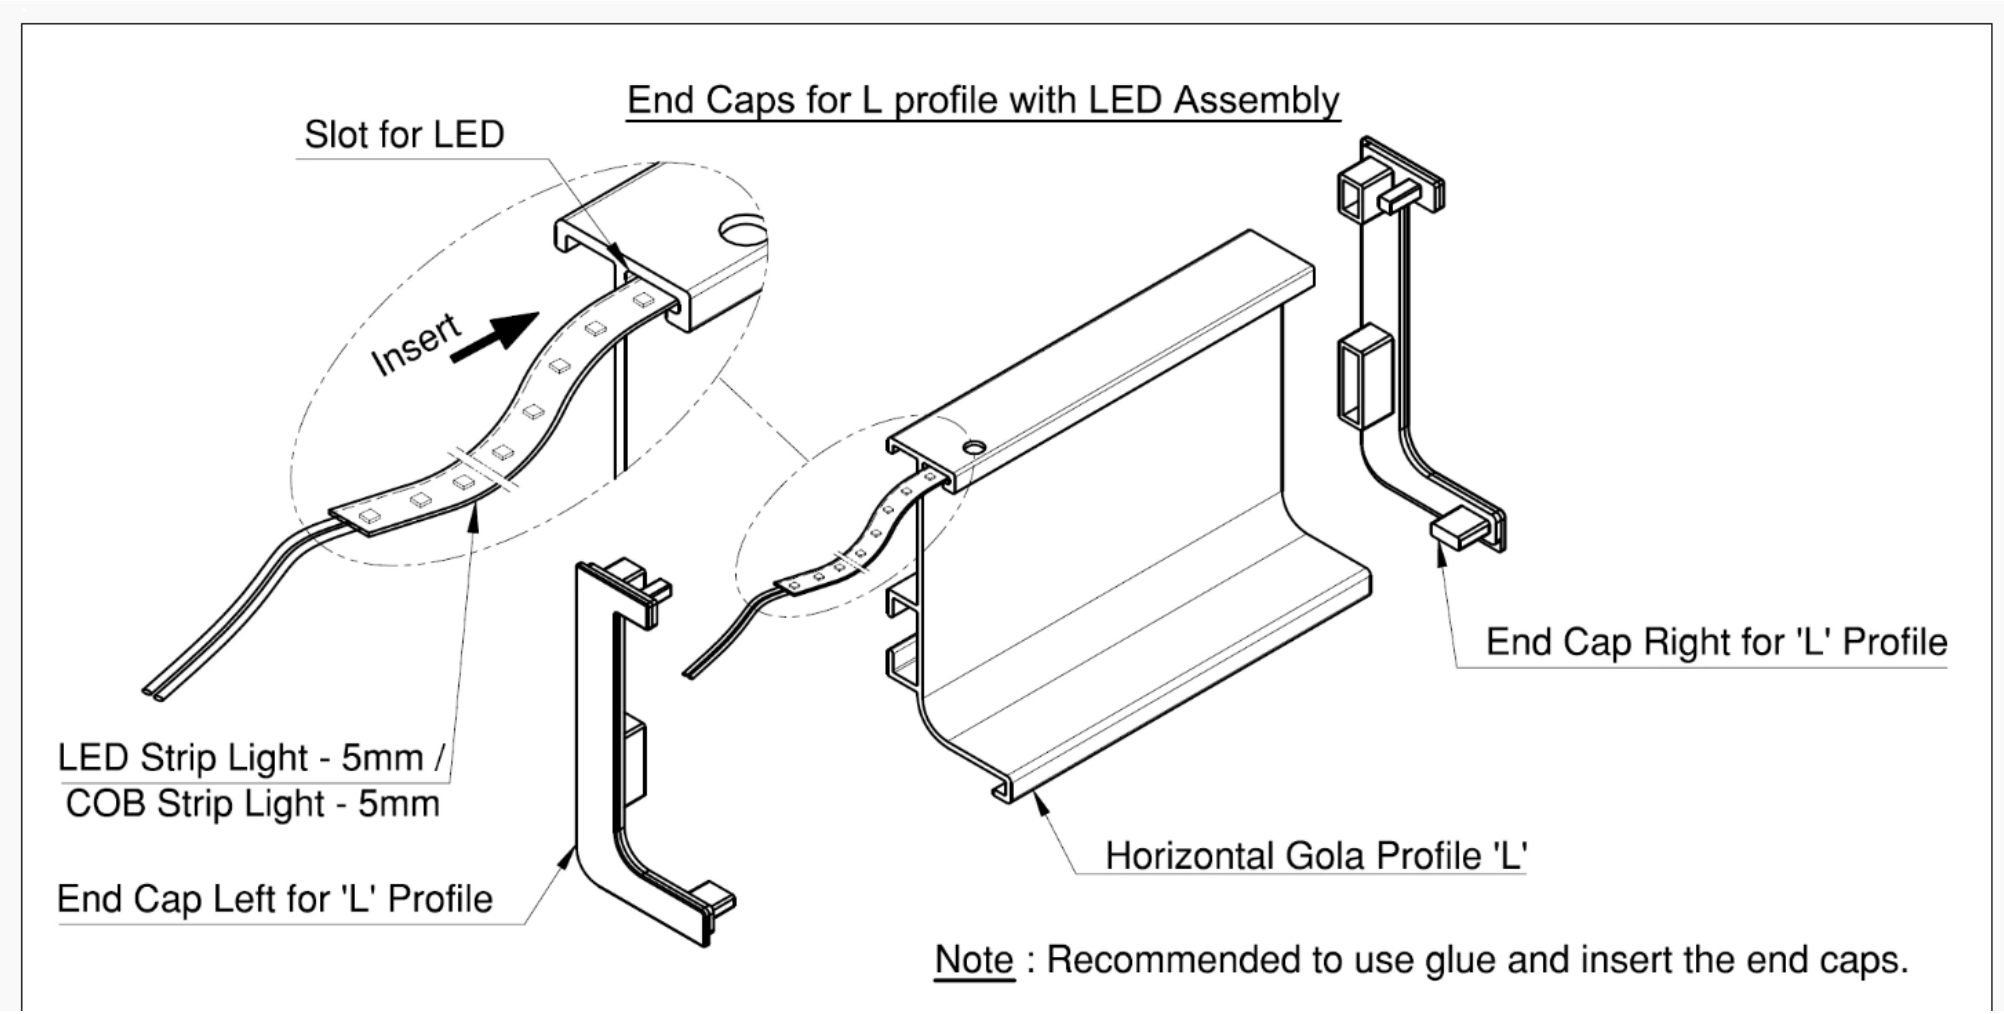


1. Feed the 5 mm LED/COB strip into the designated slot.
2. Route the cable without pinching it, then install the left and right end caps.
3. The supplied diagram recommends adhesive for the end caps.

ACCESSORIES

03 / Cabinet placement and drilling references

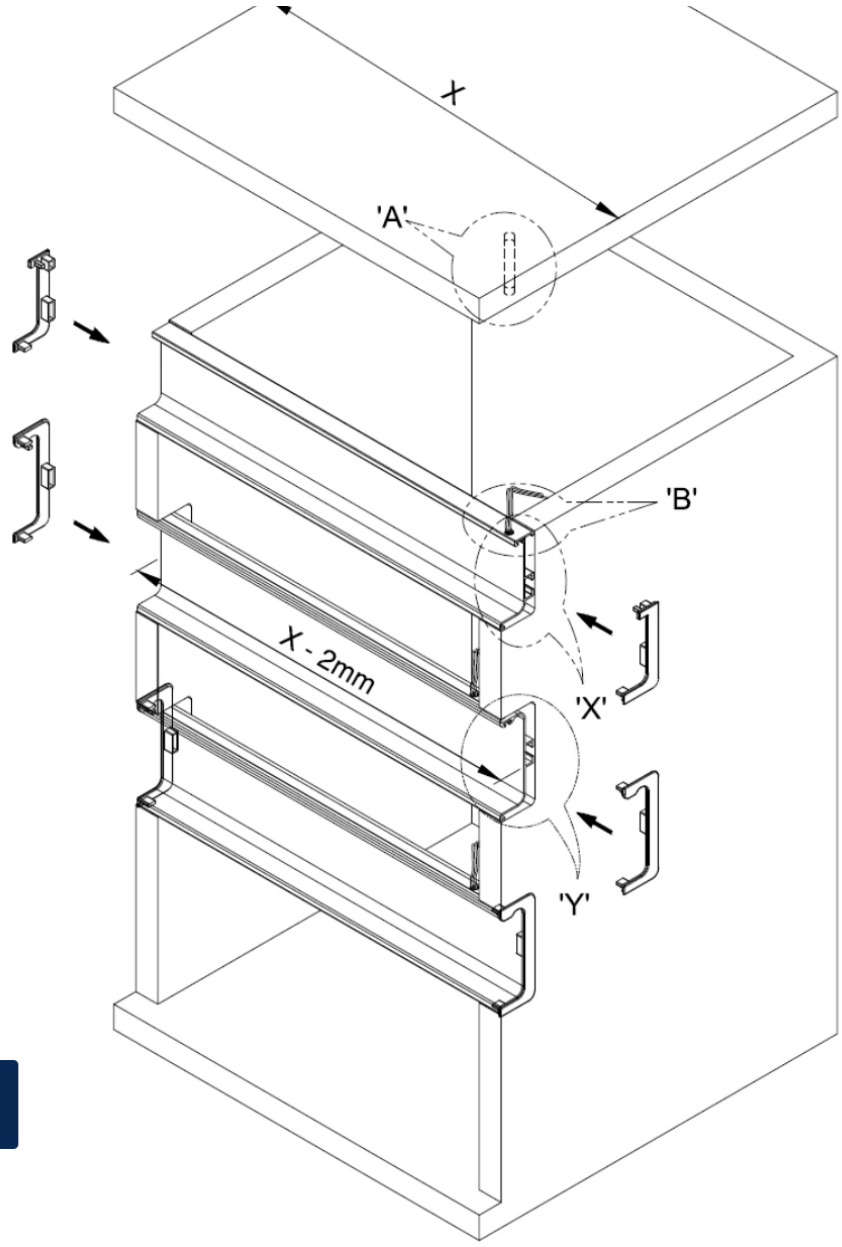


Drilling Diagram with Mounting Bracket

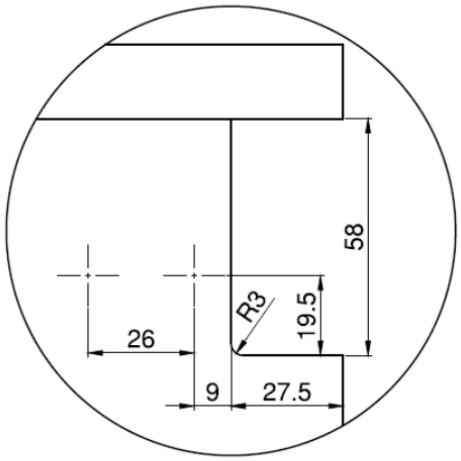

Detail 'X'
Fig. 3

Drilling Diagram with Mounting Bracket

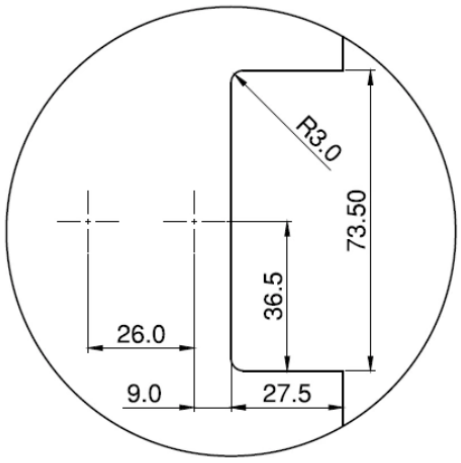

Detail 'Y'

Cabinet cut length shown: X - 2 mm.

Refer to Detail X and Detail Y for their respective drilling positions.

All numeric drawing dimensions are in millimetres.